



54Mbps 802.11g Wireless PCI Card

Installation Instruction

Item #: **XN-2526G**

OS: **Vista x64/x86**



- 1) Download file **xn2526g_vista.exe** from <http://www.xterasys.com/drivers.htm>, and save it onto desktop
- 2) Double click on **xn2526g _vista.exe** to start self-extractor
- 3) By default, it self-extracts to **c:\Xterasys\xn2526g**
- 4) Click **Unzip** to extract
- 5) Click **OK**, then **Close** to exit self-extractor
- 6) Go to **c:\Xterasys\xn2526g\RTL8185_Vista_driver_6.1070.0123.2007** folder
- 7) Double-click on **setup.exe** (which has an icon of two triangles)
- 8) Follow the on screen instruction until it completes